


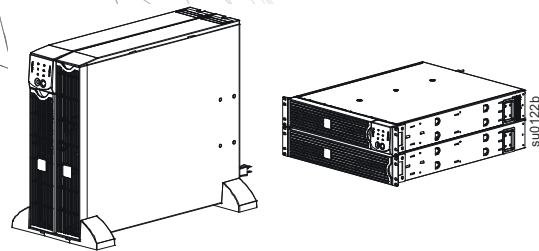

Installation and Operation

Smart-UP™ RT

SURT3000/5000/6000XL VA
200-240 Vac
Tower/Rack-Mount 3U



Smart-UPS™ RT
Uninterruptible Power Supply

3000/5000/6000 VA 200-240 Vac
Tower/Rack-Mount 3U

English

Introduction

The APC™ by Schneider Electric Smart-UPS™ RT is a high performance, uninterruptible power supply (UPS) that provides protection for electronic equipment from utility power blackouts, brownouts, sags and surges. The UPS filters small utility line fluctuations and isolates electronic equipment from large disturbances by internally disconnecting from utility line power. The UPS provides continuous power from the internal battery until utility power returns to safe levels or the battery is fully discharged.

INSTALLATION

Read the Safety Guide before installing the UPS.

Unpacking


Inspect the UPS upon receipt. Notify the carrier and dealer if there is damage.

The packaging is recyclable; save it for reuse or dispose of it properly.

Check the package contents:

- ☐ UPS (with battery modules disconnected)
- ☐ Front bezel
- ☐ Literature kit containing:
 - ☐ Product documentation, Safety Guide, and Warranty Information
 - ☐ Smart-UPS RT User Manuals CD
- ☐ Software CD
- ☐ Serial cable
- ☐ 3000 VA XLI models: two output power cords, two input power cords
- ☐ 5000/6000 VA XLI models: four output power cords, Network Management Card documentation

Specifications


| | | |
|--|---|--|
| TEMPERATURE OPERATING STORAGE | 32° to 104° F (0° to 40° C) 5° to 113° F (-15° to 45° C) charge the UPS battery every six months | This unit is designed for indoor use only. Select a location sturdy enough to handle the weight. Do not operate the UPS where there is excessive dust or the temperature and humidity are outside the specified limits. Ensure that the air vents on the front and rear of the UPS are not blocked. |
| MAXIMUM ELEVATION OPERATING STORAGE | 10,000 ft (3,000 m) 50,000 ft (15,240 m) | |
| HUMIDITY | 0 to 95% relative humidity | |
| WEIGHT UPS UPS WITH PACKAGING | 120 lbs (55 kg) 140 lbs (64 kg) |  |

Wiring and Connecting the UPS


5000/6000 VA XLI MODELS ONLY: HARDWIRING INSTRUCTIONS

- Wiring must be performed by a qualified electrician.
- Install a high magnetic 30/32 A utility circuit breaker.
- Adhere to all national and local electrical codes.
- Use #10 AWG gauge (5 mm²) wire.

1. Switch the utility circuit breaker OFF.
2. Remove the input access panel.
3. Remove circular knockout.

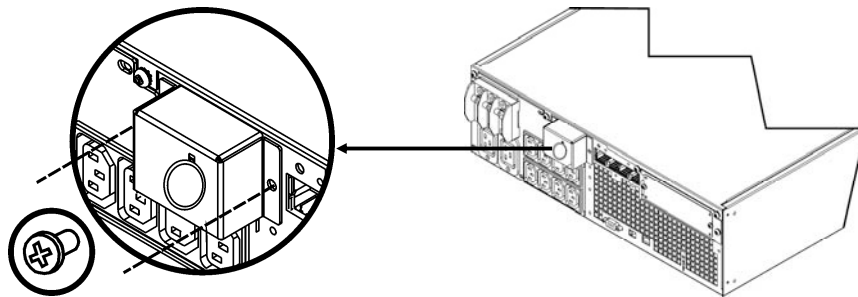


4. Run #10 AWG gauge (5 mm²) wire through the access panel, and connect the wires to the terminal block (green: ground, brown: hot, blue: neutral). Use an appropriate strain relief (not included).


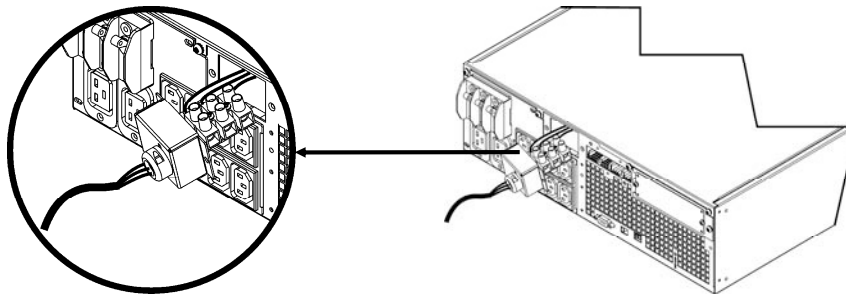









5. Switch the utility circuit breaker ON.
6. Check line voltages.
7. Replace the access panel.

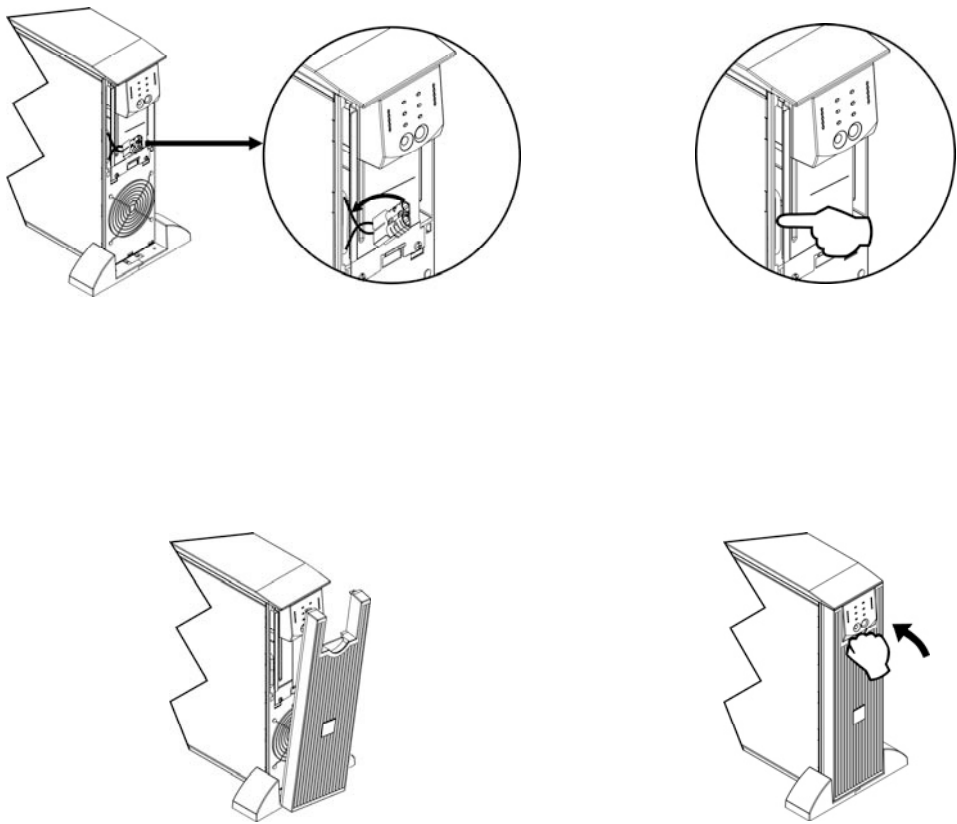CONNECTING THE BATTERY MODULES AND ATTACHING THE FRONT BEZEL




BASIC CONNECTORS

| | |
|---|--|
|  serial com | <p>Power management software and interface kits can be used with the UPS.</p> <p>Use only interface kits supplied or approved by APC by Schneider Electric.</p> <p>Any other serial interface cable will be incompatible with the UPS connector.</p> |
|  normal bypass | <p>Manual bypass enables the user to manually put connected equipment into bypass mode.</p> |
|  EPO terminal | <p>Emergency Power Off terminal allows the user to connect the UPS to the central EPO system.</p> |
|  TVSS screw | <p>The UPS features a transient voltage surge-suppression (TVSS) screw for connecting the ground lead on surge suppression devices such as telephone and network line protectors.</p> <p>When connecting grounding cable, disconnect the unit from the utility power outlet.</p> |
|  external battery pack connector | <p>Optional external battery packs provide extended runtime during power outages. These units support up to ten external battery packs.</p> <p>See the APC by Schneider Electric web site, www.apc.com for the information on the external battery pack, SURT192XLBP.</p> |
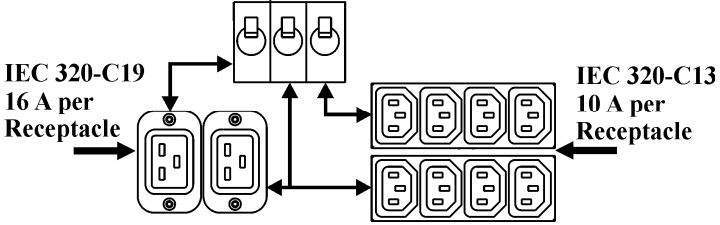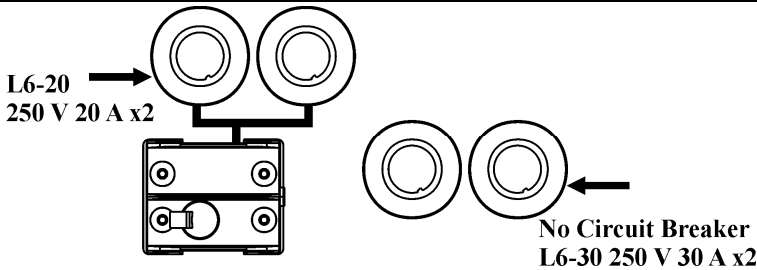
| | |
|---|--|
| <p>5000/6000 VA XLI models</p>  output circuit breakers |  |
| <p>3000/5000/6000 VA XLJ/XLT/XLTW models</p>  output circuit breaker |  |

CONNECTING EQUIPMENT AND POWER TO THE UPS


1. Connect equipment to the UPS (cables not included for XLJ/XLT/XLTW models).
2. **Avoid using extension cords.**
 - 3000 VA XLJ/XLT/XLTW/XLI and 5000/6000 VA XLJ/XLT/XLTW models: Using a power cord, plug the UPS into a two-pole, three-wire, grounded receptacle only.
 - 5000/6000 VA XLJ and 6000 VA XLT models: To draw full power from the UPS, have a qualified electrician cut off the input plug and hardwire the UPS to the appropriate power panel.
3. Turn on all connected equipment. To use the UPS as a master ON/OFF switch, ensure all connected equipment is switched ON. The equipment will not be powered until the UPS is turned on.
4. To power up the UPS press  button on the front panel.
 - The UPS battery charges when it is connected to utility power. The battery charges to 90% capacity during the first three hours of normal operation. **Do not** expect full battery run capability during this initial charge period.
5. For additional computer system security, install PowerChute Business Edition Smart-UPS monitoring software.

OPTIONS



Refer to the APC by Schneider Electric web site, www.apc.com for available accessories.

- ☐ External Battery Pack SURT192XLBP
- ☐ Rail Kit SURTRK2
- ☐ Isolation Transformer
- ☐ Service Bypass Panel

OPERATION





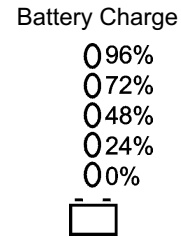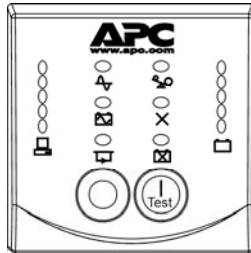







SMART-UPS RT FRONT DISPLAY



| Indicator | Description |
|---------------------|--|
| Online | The Online LED illuminates when the UPS is drawing utility power and performing double conversion to supply power to connected equipment. |
| On Battery | The UPS is supplying battery power to the connected equipment. |
| Bypass | The Bypass LED illuminates indicating that the UPS is in bypass mode. Utility power is sent directly to connected equipment during bypass mode operation. Bypass mode operation is the result of an internal UPS fault, an overload condition or a user initiated command either through an accessory or the manual bypass switch. Battery operation is not available while the UPS is in bypass mode. Refer to <i>Troubleshooting</i> in this manual. |
| Fault | The UPS detects an internal fault. Refer to <i>Troubleshooting</i> in this manual. |
| Overload | An overload condition exists. See <i>Troubleshooting</i> . |
| Replace Battery | The battery is disconnected or must be replaced. See <i>Troubleshooting</i> . |


| Feature | Function |
|---------------|--|
| Power On | Press this button to turn on the UPS. (See below for additional capabilities.) |
| Power Off | Press this button to turn off the UPS. |

| Feature | Function |
|---|---|
| Cold Start  | When there is no utility power and the UPS is off, press and hold the  button to power up the UPS and connected equipment. The UPS will emit two beeps. During the second beep, release the button. |
| Self-Test | Automatic: The UPS performs a self-test automatically when turned on, and every two weeks thereafter (by default). During the self-test, the UPS briefly operates the connected equipment on battery. Manual: Press and hold the  button for a few seconds to initiate the self-test. |

| | |
|---|--|
| Diagnostic Utility Voltage 200V 208V 0 236 0 245 0 217 0 226 0 199 0 207 0 180 0 189 0 161 0 170   220V 230V 240V 0 256 0 266 0 276 0 238 0 248 0 258 0 219 0 229 0 239 0 200 0 210 0 220 0 181 0 192 0 202    | The UPS has a diagnostic feature that displays the utility voltage. Plug the UPS into the normal utility power. The UPS starts a self-test as part of this procedure. The self-test does not affect the voltage display. Press and hold the  button to view the utility voltage bar graph display. After a few seconds the five-LED <i>Battery Charge</i>  display on the right of the front panel shows the utility input voltage. Refer to the figure at left for the voltage reading (values are not listed on the UPS). The display indicates the voltage is between the displayed value on the list and the next higher value. |
|---|--|

On Battery Operation

The UPS switches to battery operation automatically if the utility power fails. While running on battery, an alarm beeps four times every 30 seconds.

Press the  button to silence this alarm. If the utility power does not return, the UPS continues to supply power to the connected equipment until the battery is fully discharged.

When 2 minutes of run time remain the UPS emits a continuous beeping. If PowerChute is not being used, files must be manually saved and the computer must be turned off before the UPS fully discharges the battery.

The UPS battery life differs based on usage and environment. Refer to www.apc.com for on battery runtimes.

USER CONFIGURABLE ITEMS


| NOTE: SETTINGS ARE MADE THROUGH SUPPLIED POWERCHUTE SOFTWARE OPTIONAL SMART SLOT ACCESSORY CARDS OR TERMINAL MODE. | | | |
|--|--|---|---|
| FUNCTION | FACTORY DEFAULT | USER SELECTABLE CHOICES | DESCRIPTION |
| Automatic Self-Test | Every 14 days (336 hours) | Every 7 days(168 hours), 14 days (336 hours) On Startup Only, No Self-Test | Set the interval at which the UPS will execute a self-test. |
| UPS ID | UPS_IDEN | Up to eight characters to define the UPS | Uniquely identify the UPS, (i.e. server name or location) for network management purposes. |
| Date of Last Battery Replacement | Manufacture Date | Date of Battery Replacement mm/dd/yy | Reset this date when you replace the battery modules. |
| Minimum Capacity Before Return from Shutdown | 0 percent | 0, 15, 25, 35, 50, 60, 75, 90 percent | Following a low-battery shutdown, the battery modules will be charged to the specified percentage before powering connected equipment. |
| Alarm Delay After Line Failure | 5 second delay | 5 or 30 second delay At Low Battery Never | Mute ongoing alarms or disable all alarms permanently. |
| Shutdown Delay | 20 seconds | 0, 20, 60, 120, 240, 480, 720, 960 seconds | Set the interval between the time when the UPS receives a shutdown command and the actual shutdown. |
| Duration of Low Battery Warning. | 2 minutes PowerChute software provides automatic, unattended shutdown when approximately 2 minutes of battery operated runtime remains. | 2, 5, 7, 10, 12, 15, 18, 20 minutes | The low battery warning beeps are continuous when two minutes of run time remain. Change the warning interval default to a higher setting if the operating system requires a longer interval for shutdown. |
| Synchronized Turn-on Delay | 0 seconds | 0, 20, 60, 120, 240, 480, 720, 960 seconds | The UPS will wait the specified time after the return of utility power before turn-on (to avoid branch circuit overload). |
| High Bypass Point | +10% of output voltage setting | +5%, +10%, +15%, +20% | Maximum voltage that the UPS will pass to connected equipment during internal bypass operation. |

| NOTE: SETTINGS ARE MADE THROUGH SUPPLIED POWERCHUTE SOFTWARE OPTIONAL SMART SLOT ACCESSORY CARDS OR TERMINAL MODE. | | | |
|--|---|---|--|
| FUNCTION | FACTORY DEFAULT | USER SELECTABLE CHOICES | DESCRIPTION |
| Low Bypass Point | -30% of output voltage setting | -15%, -20%, -25%, -30% | Minimum voltage that the UPS will pass to connected equipment during internal bypass operation. |
| Output Voltage | <i>XLJ models:</i> 200 VAC <i>XLT models:</i> 208 VAC <i>XLI models:</i> 230 VAC <i>XLTW models:</i> 220 V | <i>XLJ models:</i> 200 VAC <i>XLT models:</i> 200, 208, 220, 230, 240 VAC <i>XLI models:</i> 200, 208, 220, 230, 240 VAC <i>XLT/XLTW models:</i> 200, 208, 220, 230, 240 VAC | Allows the user to select the UPS output voltage while online. |
| Output Frequency | Automatic 50 \pm 3 Hz or 60 \pm 3 Hz | 50 \pm 3 Hz 50 \pm 0.1 Hz 60 \pm 3 Hz 60 \pm 0.1 Hz | Sets the allowable UPS output frequency. Whenever possible, the output frequency tracks the input frequency. |
| Number of Battery Packs | 1 | Number of Connected Internal Battery Packs, (two modules per pack) | Defines the number of internal and external connected battery packs for proper run time prediction. |

CONNECTING THE EPO (EMERGENCY POWER OFF) OPTION

The output power can be disabled in an emergency by closing a switch connected to the EPO.

Adhere to National and local electrical codes when wiring the EPO.

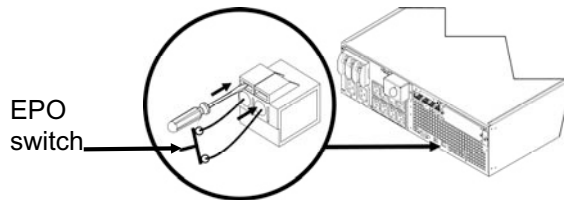

The EPO switch is internally powered by the UPS for use with non-powered switch circuit breakers.

The EPO circuit is considered a Class 2 circuit, (UL, CSA standards) and a SELV circuit (IEC standard).

Both Class 2 and SELV circuits must be isolated from all primary circuitry. Do not connect any circuit to the EPO terminal block unless it can be confirmed that the circuit is Class 2 or SELV.

If circuit standard cannot be confirmed, use a contact closure switch.

Use one of the following cable types to connect the UPS to the EPO switch:

- CL2: Class 2 cable for general use
- CL2P: Plenum cable for use in ducts, plenums, and other spaces used for environmental air.
- CL2R: Riser cable for use in a vertical run in a floor to floor shaft.
- CLEX: Limited use cable for use in dwellings and for use in raceways.
- For installation in Canada: Use only CSA certified, type ELC (extra-low voltage control cable).

TERMINAL MODE TO CONFIGURE UPS PARAMETERS

3000 VA models:

Terminal Mode is a menu driven interface that enables enhanced configuration of the UPS.

Connect the serial cable to the serial com connector on the back of the UPS.

1. **EXIT** the PowerChute*Business Edition* using the following steps:
 - From the Desktop, go to **Start => Settings > Control Panel > Administrative Tools > Services**.
 - Select **PCBE Server** and **PCBE Agent** -right click the mouse and select **Stop**.
2. Open a terminal program. Example: HyperTerminal
 - From the Desktop, go to **Start => Programs => Accessories > Communication => HyperTerminal**.
3. Double-click on the **HyperTerminal** icon.
 - Follow the prompts to choose a name and select an icon. Disregard the message, "...must install a modem," if it is displayed. Click OK.
 - Select the **COM** port that is connected to your UPS. The port settings are:
 - 9 **bits per second - 2400**
 - 9 **data - bits 8**
 - 9 **parity - none**
 - 9 **stop bit - 1**
 - 9 **flow control - none**
 - Press ENTER
4. Example for setting the number of external battery packs (SURT192XLBP):
Once the blank terminal window is open, follow these steps to enter the number of battery packs:
 - Press ENTER to initiate terminal mode. Follow the prompts:
 - Press 1 to modify UPS Settings. Press e (or E) to modify the number of battery packs. Enter the number of battery packs, including the internal battery pack (Number of packs: 1= internal battery module, 2 = 1 SURT192XLBP, 3 = 2 SURT192XLBP, etc.). Press ENTER.
 - Follow the prompts.
5. Exit the terminal program.

5000/6000 VA models:

Terminal Mode is a menu driven interface that enables enhanced configuration of the UPS.

Connect the serial cable to the serial port on the back of the UPS.

1. Open a terminal program. Example: HyperTerminal
 - From the Desktop, go to **Start => Programs => Accessories > Communication => HyperTerminal**.
2. Double-click on the **HyperTerminal** icon.
 - Follow the prompts to choose a name and select an icon. Disregard the message, "...must install a modem," if it is displayed. Click OK.
 - Select the **COM** port that is connected to your UPS. The port settings are:
 - 9 **bits per second - 2400**
 - 9 **data - bits 8**
 - 9 **parity - none**
 - 9 **stop bit - 1**
 - 9 **flow control - none**
 - Press ENTER
3. Example for setting the number of external battery packs (SURT192XLBP):

Once the blank terminal window is open, follow these steps to enter the number of battery packs:

 - Press ENTER to initiate terminal mode. Press ENTER multiple times, until the prompt **User Name:** is displayed. Follow the prompts. Type slowly, waiting until each character appears on the screen prior to typing the next character.

Network Management Card defaults:

 - User Name: apc
 - Password: apc
 - Press 1 and ENTER to select Device Manager.
 - Select the model by entering the corresponding number, then press ENTER.
 - Press 3 and ENTER to select Configuration.
 - Press 1 and ENTER to select Battery.
 - Press 2 and ENTER to change the Battery Settings.
 - Type in the number of external battery packs (four battery modules per pack), then press ENTER. (Number of packs: 1= internal battery module, 2 = 1 SURT192XLBP, 3 = 2 SURT192XLBP, etc.)
 - Press 3 and ENTER to accept the changes.
 - Press ESC multiple times (5) to return to the main menu.
 - Press 4 and ENTER to log out.

MAINTENANCE AND TRANSPORT

Replacing the Battery Module

This UPS has an easy to replace, hot-swappable battery module. Replacement is a safe procedure, isolated from electrical hazards. You may leave the UPS and connected equipment on during the procedure. See your dealer or contact APC by Schneider Electric at the web site, www.apc.com for information on replacement battery modules.

The battery replacement procedure must include replacing all battery modules in the UPS and connected external battery pack(s).



Once the battery(s) are disconnected, the connected equipment is not protected from power outages.


Be careful during battery replacement, the battery modules are heavy.




Be sure to deliver spent batteries to a recycling facility or ship to the manufacturer in the replacement battery packing material.

REMOVING BATTERY MODULES



⊙

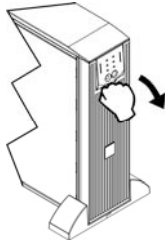


or

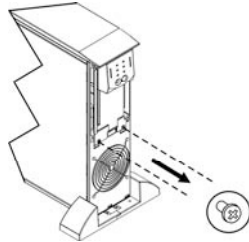



&

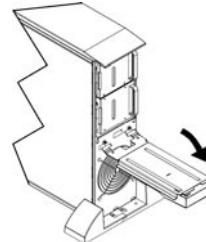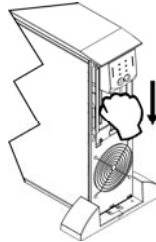


⊙

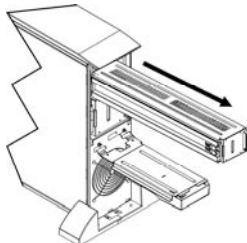

&

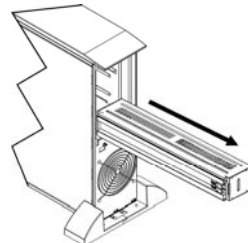

REPLACING BATTERY MODULES

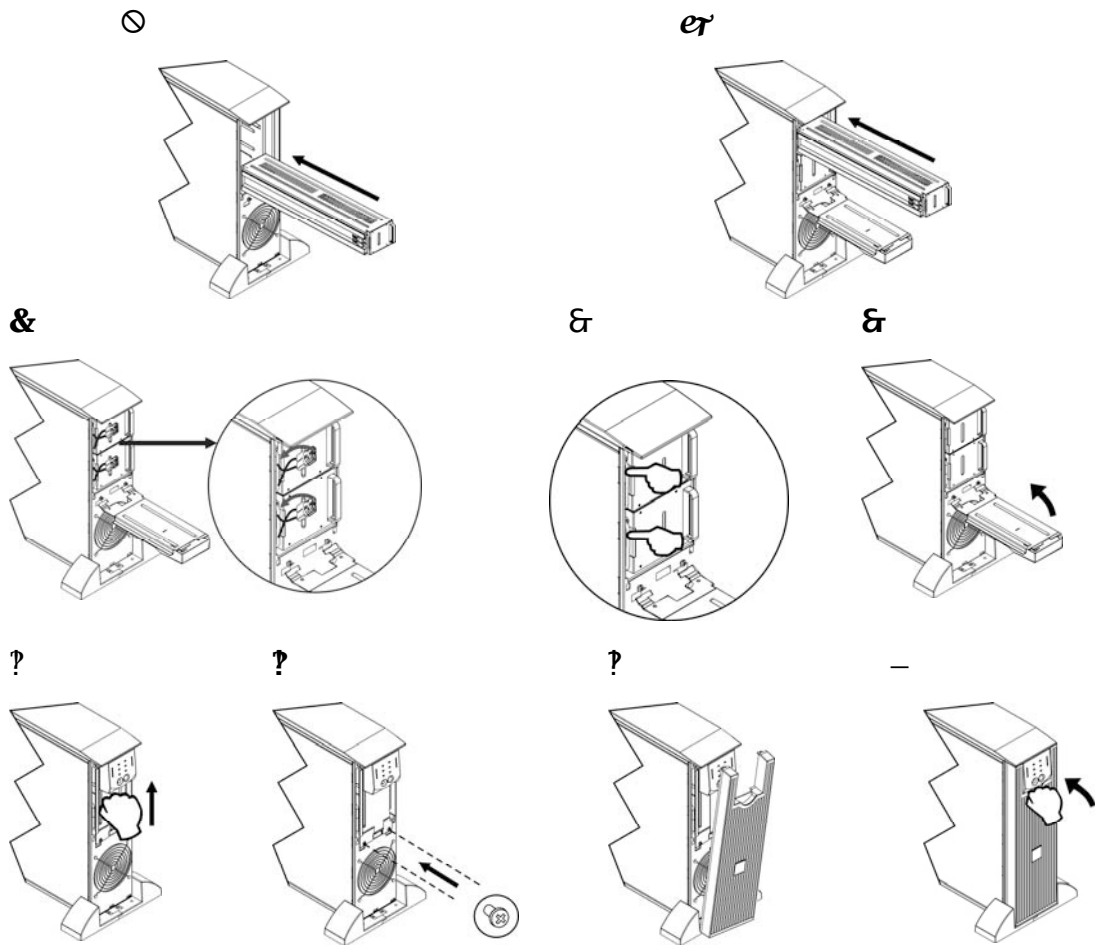

Disconnecting the Battery for Transport

Always DISCONNECT THE BATTERY(s) before shipping in compliance with U.S. Department of Transportation (DOT) and IATA regulations.





The battery(s) may remain in the UPS.

1. Shut down and disconnect any equipment attached to the UPS.
2. Shut down and disconnect the UPS from the power supply.
3. Unplug the battery connectors. Refer to *Replacing Battery modules* in this manual.

For shipping instructions contact APC by Schneider Electric at the web site, www.apc.com

TROUBLESHOOTING

Use the table below to solve minor installation and operation problems. Refer to the APC by Schneider Electric web site, www.apc.com for assistance with complex UPS problems.

| PROBLEM AND POSSIBLE CAUSE | SOLUTION |
|--|--|
| <i>UPS WILL NOT TURN ON</i> | |
| Battery not connected properly.  button not pushed. UPS not connected to utility power supply. Very low or no utility voltage. | Check that the battery connectors are fully engaged. Press  button once to power the UPS and the connected equipment. Check that the power cable from the UPS to the utility power supply is securely connected at both ends. Check the utility power supply to the UPS by plugging in a table lamp. If the light is very dim, have the utility voltage checked. |
| <i>UPS WILL NOT TURN OFF</i> | |
|  button not pushed. Internal UPS fault. | Press  button once to turn the UPS off. Do not attempt to use the UPS. Unplug the UPS and have it serviced immediately. |
| <i>UPS BEEPS OCCASIONALLY</i> | |
| Normal UPS operation when running on battery. | None. The UPS is protecting the connected equipment. |
| <i>UPS DOES NOT PROVIDE EXPECTED BACKUP TIME</i> | |
| The UPS battery(s) are weak due to a recent outage or battery(s) are near the end of their service life. | Charge the battery(s). Battery modules require recharging after extended outages. They wear faster when put into service often or when operated at elevated temperatures. If the battery(s) are near the end of their service life, consider replacing the battery(s) even if the <i>Replace Battery</i> LED is not illuminated. |
| <i>FRONT PANEL LEDs FLASH SEQUENTIALLY</i> | |
| The UPS has been shut down remotely through software or an optional accessory card. | None. The UPS will restart automatically when utility power returns. |
| <i>ALL LEDs ARE OFF AND THE UPS IS PLUGGED INTO A WALL OUTLET</i> | |
| The UPS is shut down and the battery is discharged from an extended outage. | None. The UPS will return to normal operation when the power is restored and the battery has a sufficient charge. |
| <i>BYPASS AND OVERLOAD LEDs ILLUMINATE, UPS EMITS A SUSTAINED ALARM TONE</i> | |
| The UPS is overloaded | The connected equipment exceeds the specified "maximum load" as defined in <i>Specifications</i> on the APC by Schneider Electric web site, www.apc.com The alarm remains on until the overload is removed. Disconnect nonessential equipment from the UPS to eliminate the overload condition. |

| PROBLEM AND POSSIBLE CAUSE | SOLUTION |
|--|---|
| BYPASS LED ILLUMINATES | |
| The bypass switch has been turned on manually or through an accessory. | If bypass is the chosen mode of operation, ignore illuminated LED. If bypass is not the chosen mode of operation move the bypass switch on the back of the UPS, to the normal position. |
| FAULT AND OVERLOAD LEDs ILLUMINATE, UPS EMITS A SUSTAINED ALARM TONE | |
| The UPS has ceased sending power to connected equipment | The connected equipment exceeds the specified "maximum load" as defined in <i>Specifications</i> on the APC by Schneider Electric web site, www.apc.com Disconnect nonessential equipment from the UPS to eliminate the overload condition. Press the OFF button, then the ON button to restore power to connected equipment. |
| FAULT LED ILLUMINATES | |
| Internal UPS fault. | Do not attempt to use the UPS. Turn the UPS off and have it serviced immediately. |
| REPLACE BATTERY LED ILLUMINATES | |
| Replace Battery LED flashes and short beep is emitted every two seconds to indicate the battery is disconnected. Weak battery. Failure of a battery self-test. | Check that the battery connectors are fully engaged. Allow the battery to recharge for 24 hours. Then, perform a self-test. If the problem persists after recharging, replace the battery. The UPS emits short beeps for one minute and the <i>Replace Battery</i> LED illuminates. The UPS repeats the alarm every five hours. Perform the self-test procedure after the battery has charged for 24 hours to confirm the <i>Replace Battery</i> condition. The alarm stops and the LED clears if the battery passes the self-test. |
| UPS OPERATES ON BATTERY ALTHOUGH NORMAL LINE VOLTAGE EXISTS | |
| Very high, low, or distorted line voltage. Inexpensive fuel powered generators can distort the voltage. | Move the UPS to a different outlet on a different circuit. Test the input voltage with the utility voltage display. |
| DIAGNOSTIC UTILITY VOLTAGE | |
| All five LEDs are illuminated | The line voltage is extremely high and should be checked by an electrician. |
| There is no LED illumination | If the UPS is plugged into a properly functioning utility power outlet, the line voltage is extremely low. |
| ONLINE LED | |
| There is no LED illumination | The UPS is running on battery, or it is not turned on. |
| The LED is blinking | The UPS is running an internal self-test. |

SERVICE AND TRANSPORT

If the UPS requires service do not return to the dealer. Follow these steps:

1. Review the problems discussed in the *Troubleshooting* section of this manual to eliminate common problems.
2. If the problem persists, contact APC by Schneider Electric Customer Support through the APC web site, www.apc.com
 - Note the model number of the UPS, the serial number located on the back of the unit, and the date purchased. If you call APC by Schneider Electric Customer Support, a technician will ask you to describe the problem and attempt to solve it over the phone. If this is not possible, the technician will issue a Returned Material Authorization Number (RMA#).
 - If the UPS is under warranty, repairs are free.
 - Procedures for servicing or returning products may vary internationally. Refer to the APC by Schneider Electric web site for country specific instructions.
3. Pack the UPS in its original packaging.
 - If the original packing is not available, refer to the APC by Schneider Electric web site, www.apc.com for information about obtaining a new set.
 - Pack the UPS properly to avoid damage in transit. Never use Styrofoam beads for packaging. Damage sustained in transit is not covered under warranty.

Always DISCONNECT THE BATTERY(S) before shipping in compliance with U.S. Department of Transportation (DOT) and IATA regulations.

The battery(s) may remain in the UPS.

4. Mark the RMA# on the outside of the package.
5. Return the UPS by insured, prepaid carrier to the address given to you by Customer Support.

Transport

1. Shut down and disconnect all connected equipment.
2. Disconnect the unit from utility power.
3. Disconnect all internal and external batteries (if applicable).
4. Follow the shipping instructions outlined in the *Service* section of this manual.

LIMITED FACTORY WARRANTY

Schneider Electric IT Corporation (SEIT), warrants its products to be free from defects in materials and workmanship for a period of two (2) years excluding the batteries, which are warranted for one (1) year from the date of purchase. The SEIT obligation under this warranty is limited to repairing or replacing, at its own sole option, any such defective products. Repair or replacement of a defective product or parts thereof does not extend the original warranty period.

This warranty applies only to the original purchaser who must have properly registered the product within 10 days of purchase. Products may be registered online at warranty.apc.com.

SEIT shall not be liable under the warranty if its testing and examination disclose that the alleged defect in the product does not exist or was caused by end user's or any third person's misuse, negligence, improper installation, testing, operation or use of the product contrary to SEIT's recommendations or specifications. Further, SEIT shall not be liable for defects resulting from: 1) unauthorized attempts to repair or modify the product, 2) incorrect or inadequate electrical voltage or connection, 3) inappropriate on site operation conditions, 4) Acts of God, 5) exposure to the elements, or 6) theft. In no event shall SEIT have any liability under this warranty for any product where the serial number has been altered, defaced, or removed.

EXCEPT AS SET FORTH ABOVE, THERE ARE NO WARRANTIES, EXPRESS OR IMPLIED, BY OPERATION OF LAW OR OTHERWISE, APPLICABLE TO PRODUCTS SOLD, SERVICED OR FURNISHED UNDER THIS AGREEMENT OR IN CONNECTION HERewith.

SEIT DISCLAIMS ALL IMPLIED WARRANTIES OF MERCHANTABILITY, SATISFACTION AND FITNESS FOR A PARTICULAR PURPOSE.

SEIT EXPRESS WARRANTIES WILL NOT BE ENLARGED, DIMINISHED, OR AFFECTED BY AND NO OBLIGATION OR LIABILITY WILL ARISE OUT OF, SEIT'S RENDERING OF TECHNICAL OR OTHER ADVICE OR SERVICE IN CONNECTION WITH THE PRODUCTS.

THE FOREGOING WARRANTIES AND REMEDIES ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES AND REMEDIES. THE WARRANTIES SET FORTH ABOVE CONSTITUTE SEIT'S SOLE LIABILITY AND PURCHASER'S EXCLUSIVE REMEDY FOR ANY BREACH OF SUCH WARRANTIES. SEIT WARRANTIES EXTEND ONLY TO ORIGINAL PURCHASER AND ARE NOT EXTENDED TO ANY THIRD PARTIES.

IN NO EVENT SHALL SEIT, ITS OFFICERS, DIRECTORS, AFFILIATES OR EMPLOYEES BE LIABLE FOR ANY FORM OF INDIRECT, SPECIAL, CONSEQUENTIAL OR PUNITIVE DAMAGES, ARISING OUT OF THE USE, SERVICE OR INSTALLATION OF THE PRODUCTS, WHETHER SUCH DAMAGES ARISE IN CONTRACT OR TORT, IRRESPECTIVE OF FAULT, NEGLIGENCE OR STRICT LIABILITY OR WHETHER SEIT HAS BEEN ADVISED IN ADVANCE OF THE POSSIBILITY OF SUCH DAMAGES. SPECIFICALLY, SEIT IS NOT LIABLE FOR ANY COSTS, SUCH AS LOST PROFITS OR REVENUE, WHETHER DIRECT OR INDIRECT, LOSS OF EQUIPMENT, LOSS OF USE OF EQUIPMENT, LOSS OF SOFTWARE, LOSS OF DATA, COSTS OF SUBSTITUANTS, CLAIMS BY THIRD PARTIES, OR OTHERWISE.

NOTHING IN THIS LIMITED WARRANTY SHALL SEEK TO EXCLUDE OR LIMIT SEIT'S LIABILITY FOR DEATH OR PERSONAL INJURY RESULTING FROM ITS NEGLIGENCE OR ITS FRAUDULENT MISREPRESENTATION OF TO THE EXTENT THAT IT CANNOT BE EXCLUDED OR LIMITED BY APPLICABLE LAW.

To obtain service under warranty you must obtain a Returned Material Authorization (RMA) number from customer support. Customers with warranty claims issues may access the SEIT worldwide customer support network through the SEIT Web site: www.apc.com. Select your country from the country selection drop down menu. Open the Support tab at the top of the web page to obtain information for customer support in your region. Products must be returned with transportation charges prepaid and must be accompanied by a brief description of the problem encountered and proof of date and place of purchase.

REGULATORY

Radio Frequency Warnings

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference. The user is responsible for correcting the interference.

Shielded signal cables must be used with this product to ensure compliance with the Class A FCC limits.

APC by Schneider Electric Worldwide Customer Support

Customer support for this or any other APC by Schneider Electric product is available at no charge in any of the following ways:

- Visit the APC by Schneider Electric web site, www.apc.com to access documents in the APC Knowledge Base and to submit customer support requests.
 - **www.apc.com** (Corporate Headquarters)
Connect to localized APC by Schneider Electric web site for specific countries, each of which provides customer support information.
 - **www.apc.com/support/**
Global support searching APC Knowledge Base and using e-support.
- Contact the APC by Schneider Electric Customer Support Center by telephone or e-mail.
 - Local, country specific centers: go to **www.apc.com/support/contact** for contact information.
 - For information on how to obtain local customer support, contact the APC by Schneider Electric representative or other distributor from whom you purchased your APC by Schneider Electric product.

Elite Partner's authorized by Schneider Electric

Powercom Group Co., Ltd.

No.10, Street 420, Sangkat Boeung Trabek,
Khan Chamkarmon, Phnom Penh, Cambodia.
Tel: +855-23 990 630 / 23 990 631.
E-mail: info@powercom-group.com
<https://www.powercom-group.com>

© 2015 APC by Schneider Electric. Smart-UPS and PowerChute are owned by Schneider Electric Industries S.A.S. or their affiliated companies. All other trademarks are property of their respective owners.